


PIN-CH® foot part for sled base chair

PIN-CHSC

Rectangular foot part for our flexible PIN-CH® system, where the foot part is selected based on surface and design. The foot part clicks into the foot holder and can be removed with, for example, a screwdriver. Ideal for sled chairs and other furniture with horizontal tubes or wire.

Used together with foot holder **PIN-S** och **PIN-SC**.

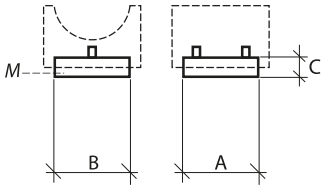

The PIN-CH® system is designed to make it easy to replace the foot part when it becomes worn or when moving a piece of furniture to a different surface. The components are marked to make it easier to find replacement parts.

Art. no	A	B	C	M
PIN-CHSC1013N	33	11.5	3.5	POM
PIN-CHSC1013S	33	11.5	3.5	POM

Natural (undyed) *Black RAL 9017*

Address Ackurat Industriplast AB
Värnamovägen 42
360 30 Lammhult
Sweden

Phone +46 (0)472 26 93 00
E-mail info@ackurat.se
Web ackurat.com